



RANDOM BOULDER PLACEMENT

Plan View

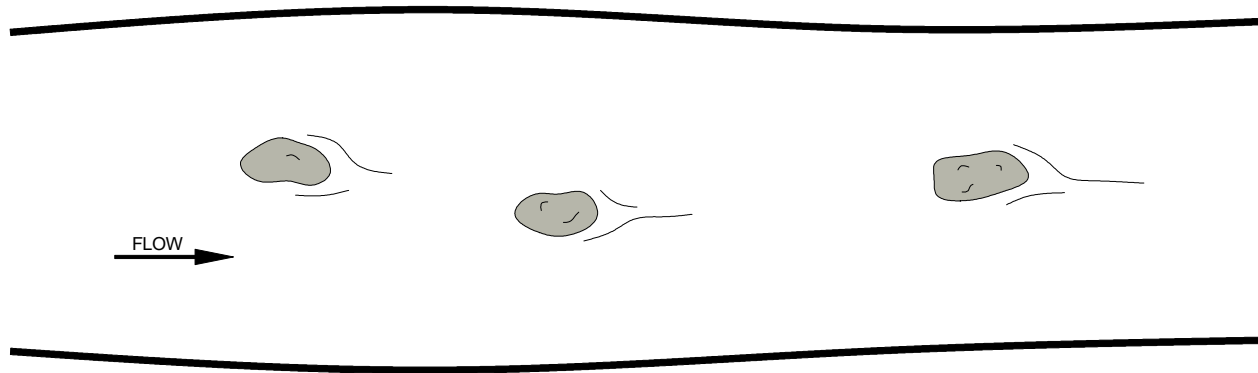

Note: Place boulders in the middle third of the wetted width of the stream to prevent flow deflection into the streambanks

Section View

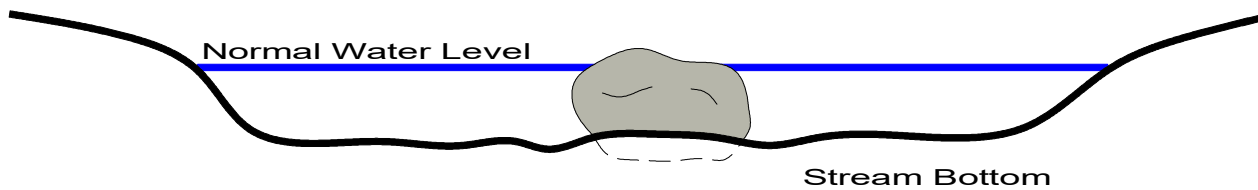

Note: Boulder should be large enough not to be displaced during high flow periods
Boulder height should be within 2" of normal water level

